

BAR CODE CONFIGURATION METHODS

- ❗ Please note that the MS6220 Pulsar can only be configured using the *Multi-Code Method*.
- ❗ To properly configure an MS9540 scanner, all programming codes must be scanned using the CodeGate option.

Multi-Code Method

All features can be enabled or disabled using the *Multi-Code Method*. A feature marked with a tilde (~) requires the *Multi-Code Method*.

1. Power up the scanner.
2. Scan the *enter/exit configuration mode* bar code (3 beeps).
3. Scan the bar code for the desired feature (1 beep).



Multiple features can be enabled/disabled before scanning the *enter/exit configuration mode* bar code.

4. Scan the *enter/exit configuration mode* bar code (3 beeps) and save the new configuration.



To abort a configuration change, power off the scanner before scanning the enter/exit code.

Enter/Exit Configuration Mode



NEED TO START OVER?

Scan the *Recall Default* bar code. This will erase all previous settings and return the scanner to its default communication protocol.

Keyboard Wedge interface scanners will load keyboard wedge defaults.

CODE TYPES AND DECODE RULES

2 OF 5 CODES



* Enable Interleaved 2 of 5 (ITF)